MOTOR EQUIPMENT UTILIZATION RECORD							
DATE (YYMMDD)				187F126X8SW9056354 NO.			ADMINISTRATION NO.
Sept 10, 2002	95 Pickup Dodg	ckup Dodge		DB-662			50000 gas çard #
ORGANIZATION NAME		ACTION	Т	IME	MILES	HOURS	FUEL OIL NA
1ST OPERATOR (Last Name, First, M.I.)		IN			17375		HEPORT TO (Last Name, First, M.B.)
SPECHTROBERT J		ОИТ			14360		Dorothy Gordon
Det of	1	TOTAL			15		DISPATCHER'S SIGNATURE
2D OPERATOR (Last Na	me, First, M.I.)	IN					REPORT TO (Last Name, First, M.I.)
OPERATOR'S SIGNATU	IRE	OUT					DISPATCHER'S SIGNATURE
		TOTAL					DISPATCHER'S SIGNATURE
3D OPERATOR (Last Na	me, First, M.I.)	IN					REPORT TO (Last Name, First, M.I.)
OPERATOR'S SIGNATU	RE	оит					DISPATCHER'S SIGNATURE
		TOTAL					DISPATORER S SIGNATORE
4TH OPERATOR (Last N	lame, First, M.I.)	IN					REPORT TO (Last Name, First, M.I.)
OPERATOR'S SIGNATU	RE	OUT					DISPATCHER'S SIGNATURE
		TOTAL					DISPATCHER'S SIGNATURE
DESTIN	ATION	TIME			RELEASED BY (Signature)		DEMARKS
		ARRIVE DEPA		Т			REMARKS
1. FT. MUI	u 1010	0800	090	0			
10	rices	0910	100	0			
3 Russell	HALL	1015	1100	7			
10 FT. MO	M. 1010	1110					
TQ 5.							
TO 6.							
TO PLea	se pat	4/10	S	We.	hicke	iNFO	15.000 Mile
B. Checku	IP, and	Ta	hec	K	brak.	es and	d check For
9. COOLIN	g, engi	'Ne	13	QU	er hear	ling.	
TO 10.	,					0	
TO 11.							
TO 12.							
TO							
13. TO							
14. TO							
15.							
TO 16.							

VEHICLE MAINTENANCE HISTORY 95 Dodge Pickup Truck 1B7FL26X6SW905635

Operation Inspection List (to be completed at every mileage maintenance inspection)

Accident Damage	DATE
Other Damage	
Leaks	10/02
Tires, Tracks wheel	10103
Fuel, oil, coolant	10100
Battery	
Horn, Safety Devices	
Lights, Reflectors Glass	
Instruments	
Windshield wipers	
Communication equipment	
Cargo, mounted equipment	
Steering	
Belts/pulleys	15/500/02
Brakes - Front disc brakes need to be replaced est. \$335.00 Power unit/engine	10/30/100
Power unit/engine	
Accident Report Form	

Turm Vehiche into AFES or Motor

Pooke or Check with Dephoys. Whatever

Source that can put us back on the

road ASAP. DY

MAINTENANCE TO BE COMPLETED EVERY 5000 MILES

Oil	
Oil Filter	
Lube	
Front Diff	
Rear Diff	
Transfer Case	
Transmission Fluid	5
Air Filter	
Power Steering Fluid	
Brake Fluid	
Windshield Washer Fluid	
Anti Freeze/Coolant	
Battery	
Wash F&R Windows	
Vacuum interior	
Tire Pressure	

SCHEDULED MAINTENANCE PER MILEAGE OF VEHICLE	
5000 Rotate tires	
Lubricate steering linkage	
suspension	
drive shaft U-joint if equipped	
with grease fittings	
Inspect exhaust system for leaks	
damage or loose parts	
Remove any foreign material trapped	
by exhaust system shielding.	
Lubricate rear drive shaft double cardan j	oint centering
ball	
10,000	
Change engine oil	
Replace oil filter	- 1
15,000	15/2 120
Change engine oil	15/38/00
Replace Oil filter	11
Inspect engine cooling system,	11
hoses, and clamps	11
Rotate tires	11
Inspect and lubricate automatic	11
transmission shift leakage	- //
Lubricate steering linkage	(/
suspension	11
Drive shaft U-joint is equipped	11
with grease fittings	11
Inspect exhaust system for leaks,	
damage or loose parts	11
Remove any foreign material trapped	
by exhaust system	
Lubricate rear drive shaft double	
cardan joint centering ball.	15/500/02
cardair joint centering barr.	15/56/100
20,000	
Change engine oil	
Replace oil filter	
25,000	
Change engine oil	
Replace oil filter	
Inspect engine cooling system,	
hoses, and clamps	

Check coolant strength every 15,000 miles or 12 months Rotate tires Inspect and lubricate automatic transmission shift leakage Lubricate steering linkage suspension Drive shaft U-joint if equipped with grease fittings Inspect exhaust system for leaks, damage to loose parts Remove any foreign material trapped by exhaust system shielding 30,000 Change engine oil Replace oil filter Inspect engine cooling system, hoses, and clamps Check coolant strength every 15,000 miles or 12 months Rotate tires Inspect and lubricate automatic transmission shift leakage Lubricate steering linkage suspension Drive shaft U-joint if equipped with grease fittings Inspect exhaust system for leaks, damage to loose parts Remove any foreign material trapped by exhaust system shielding 35,000 Change engine oil Replace oil filter Inspect engine cooling system, hoses, and clamps Check coolant strength every 15,000 miles or 12 months Rotate tires Inspect and lubricate automatic transmission shift leakage Lubricate steering linkage suspension Drive shaft U-joint if equipped with grease fittings

Inspect exhaust system for leaks, damage to loose parts Remove any foreign material trapped by exhaust system shielding	
Change engine oil Replace oil filter Inspect engine cooling system, hoses, and clamps Check coolant strength every 15,000 miles or 12 months Rotate tires Inspect and lubricate automatic transmission shift leakage Lubricate steering linkage suspension Drive shaft U-joint if equipped with grease fittings Inspect exhaust system for leaks, damage to loose parts Remove any foreign material trapped by exhaust system shielding	
Change engine oil Replace oil filter Inspect engine cooling system, hoses, and clamps Check coolant strength every 15,000 miles or 12 months Rotate tires Inspect and lubricate automatic transmission shift leakage Lubricate steering linkage suspension Drive shaft U-joint if equipped with grease fittings Inspect exhaust system for leaks, damage to loose parts Remove any foreign material trapped by exhaust system shielding	
50,000 Change engine oil Replace oil filter	

Inspect engine cooling system,	
hoses, and clamps	
Check coolant strength every 15,000	
miles or 12 months	
Rotate tires	
Inspect and lubricate automatic	
transmission shift leakage	
Lubricate steering linkage	
suspension	
Drive shaft U-joint if equipped	
with grease fittings	
Inspect exhaust system for leaks,	
damage to loose parts	
Remove any foreign material trapped	
by exhaust system shielding	
55,000	
Change engine oil	
Replace oil filter	
Inspect engine cooling system,	
hoses, and clamps	
Check coolant strength every 15,000	
miles or 12 months	
Rotate tires	
Inspect and lubricate automatic	
transmission shift leakage	
Lubricate steering linkage	
suspension	
Drive shaft U-joint if equipped	
with grease fittings	
Inspect exhaust system for leaks,	
damage to loose parts	
Remove any foreign material trapped	
by exhaust system shielding	
60,000	
Change engine oil	
Replace oil filter	
Inspect engine cooling system,	
hoses, and clamps	
Check coolant strength every 15,000	
miles or 12 months	
Rotate tires	
Inspect and lubricate automatic	
transmission shift leakage	
Lubricate steering linkage	
suspension	

Drive shaft U-joint if equipped with grease fittings	
Inspect exhaust system for leaks,	
damage to loose parts	
Remove any foreign material trapped by exhaust system shielding	